

# MM.9.P09.0780.S- Mounting instructions

## Peugeot Boxer

RWD | Single Wheel | **WB=ALL** | **OV=860mm**

## Fiat Ducato


RWD | Single Wheel | **WB=ALL** | **OV=860mm**

## Citroën Jumper


RWD | Single Wheel | **WB=ALL** | **OV=860mm**

## Dodge Promaster


RWD | Single Wheel | **WB=ALL** | **OV=860mm**

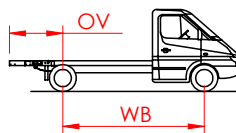


Ref	Bolts	QTY
1	M12 - 25mm	4
2	M10 DIN6921 - 40mm	4
3	BTFF12.040	24
4	BTFF14.040	8

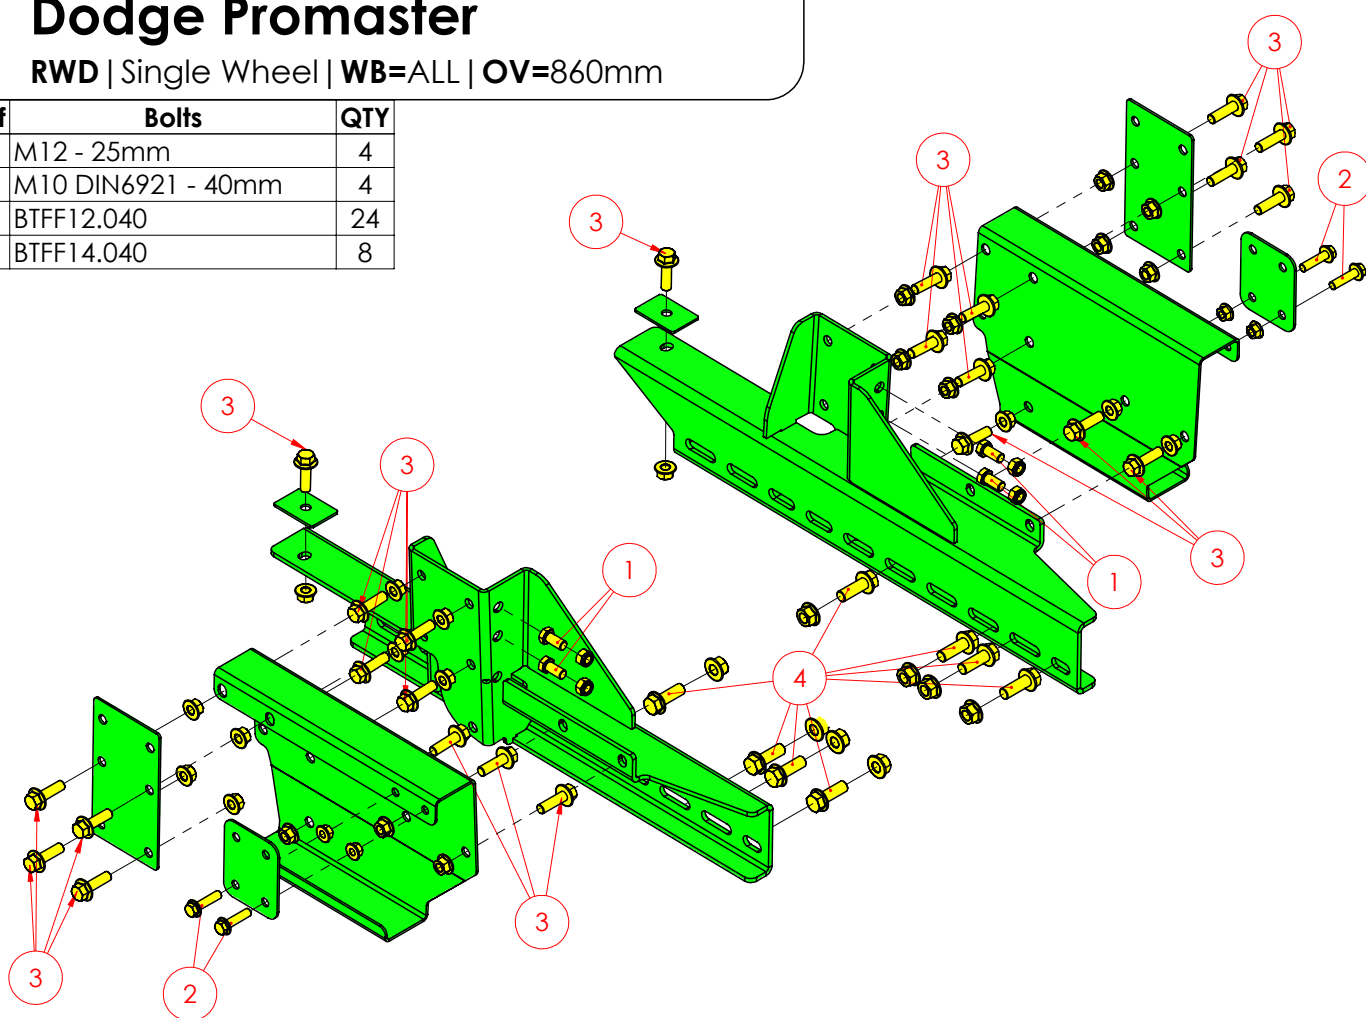


## STEP 1

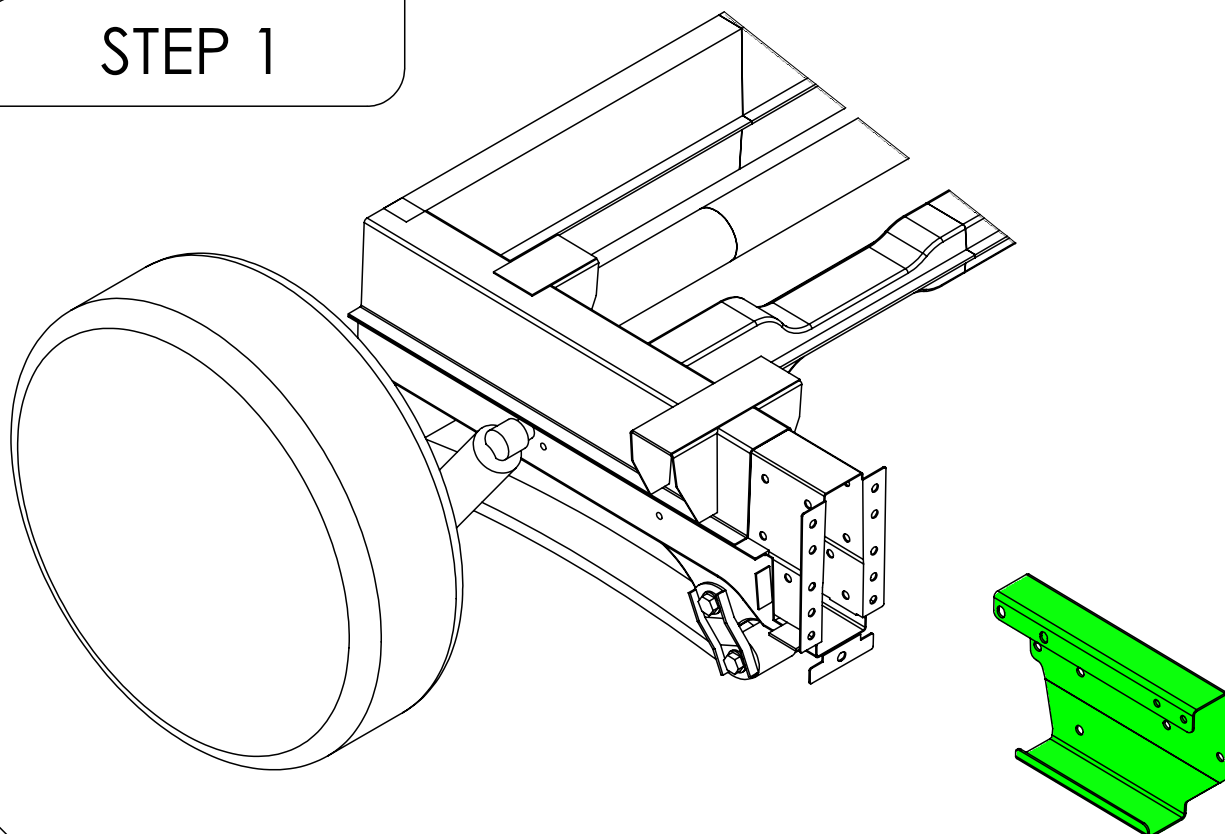


## STEP 2

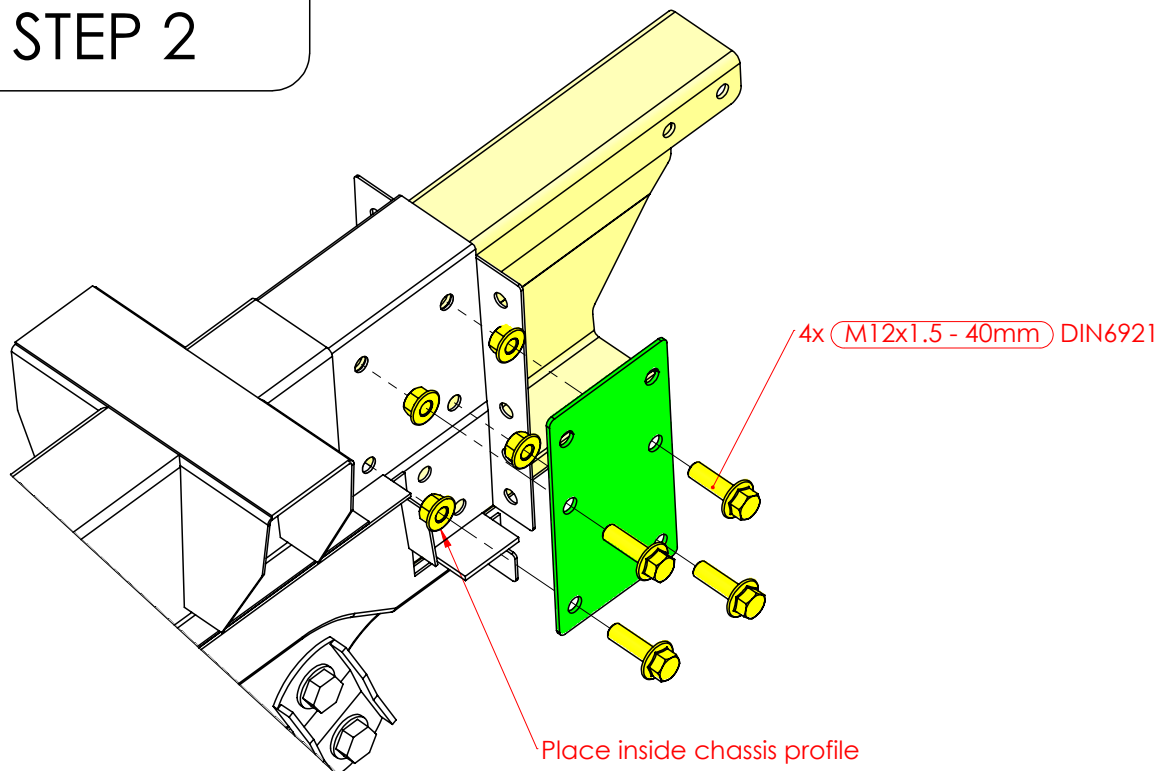


## STEP 3

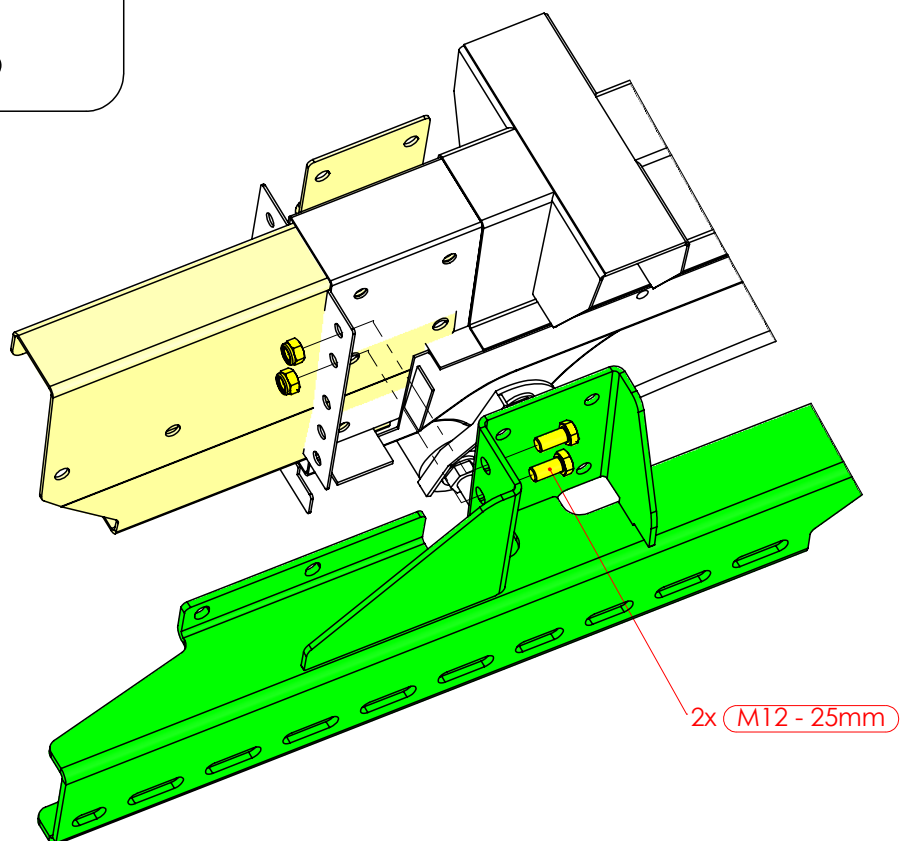


## STEP 4

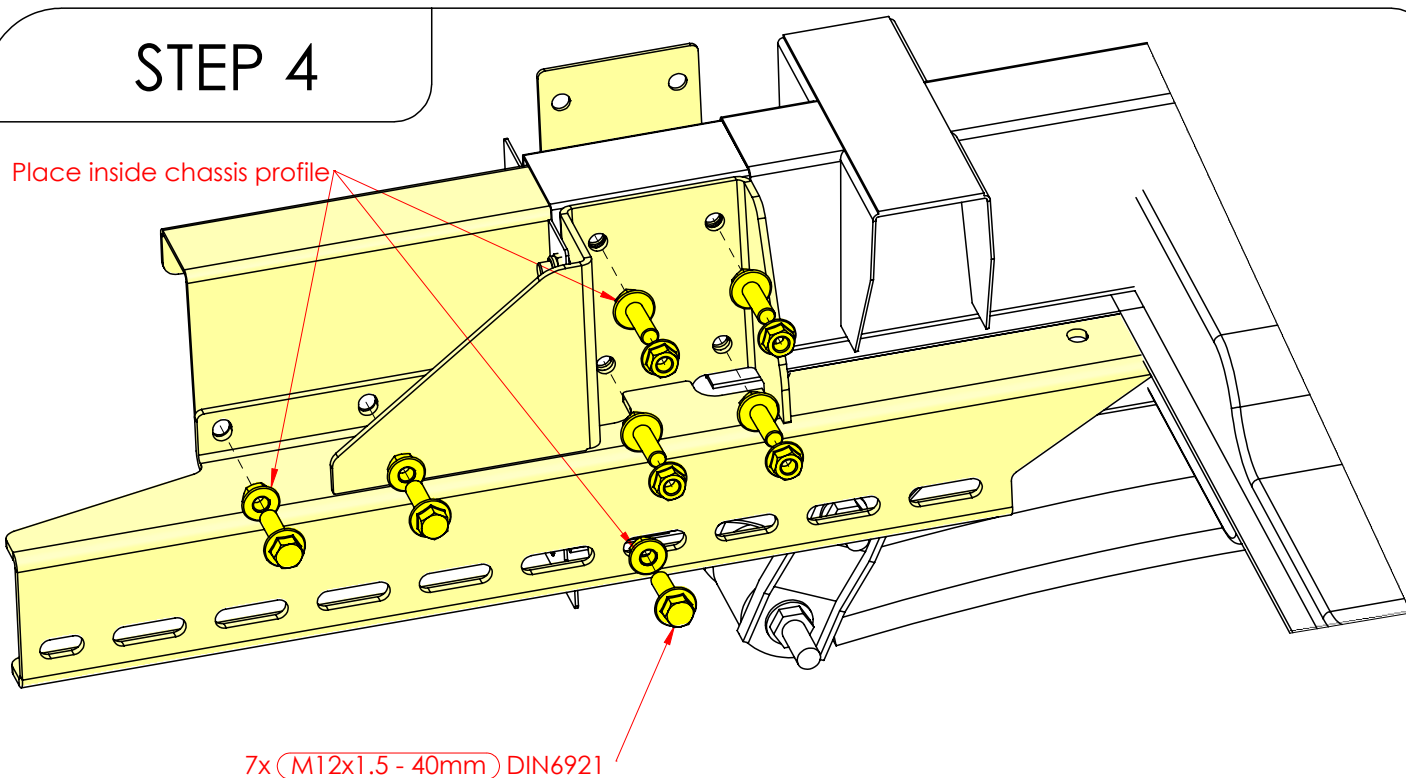


## STEP 5

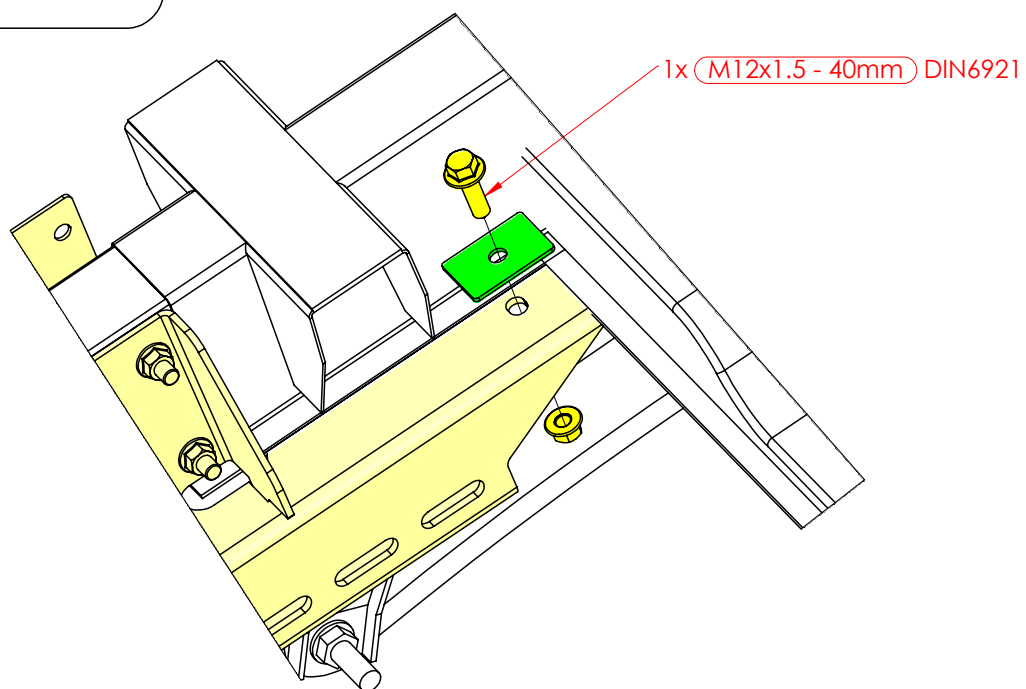

## STEP 6

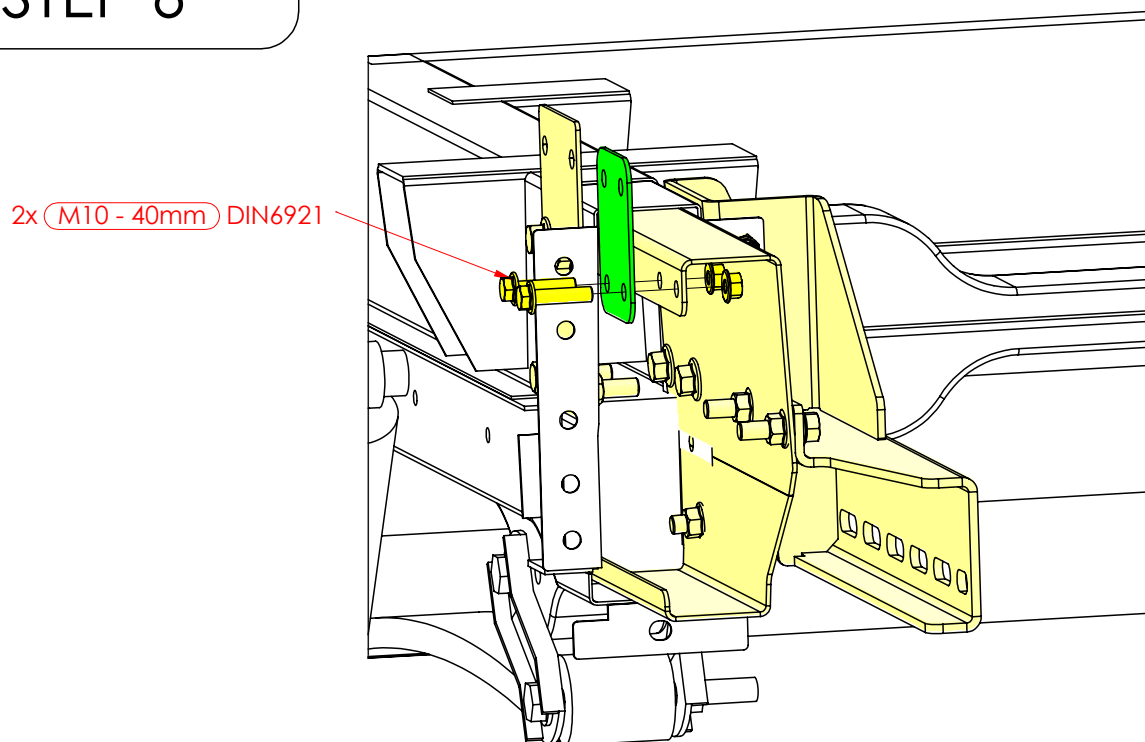


## STEP 7

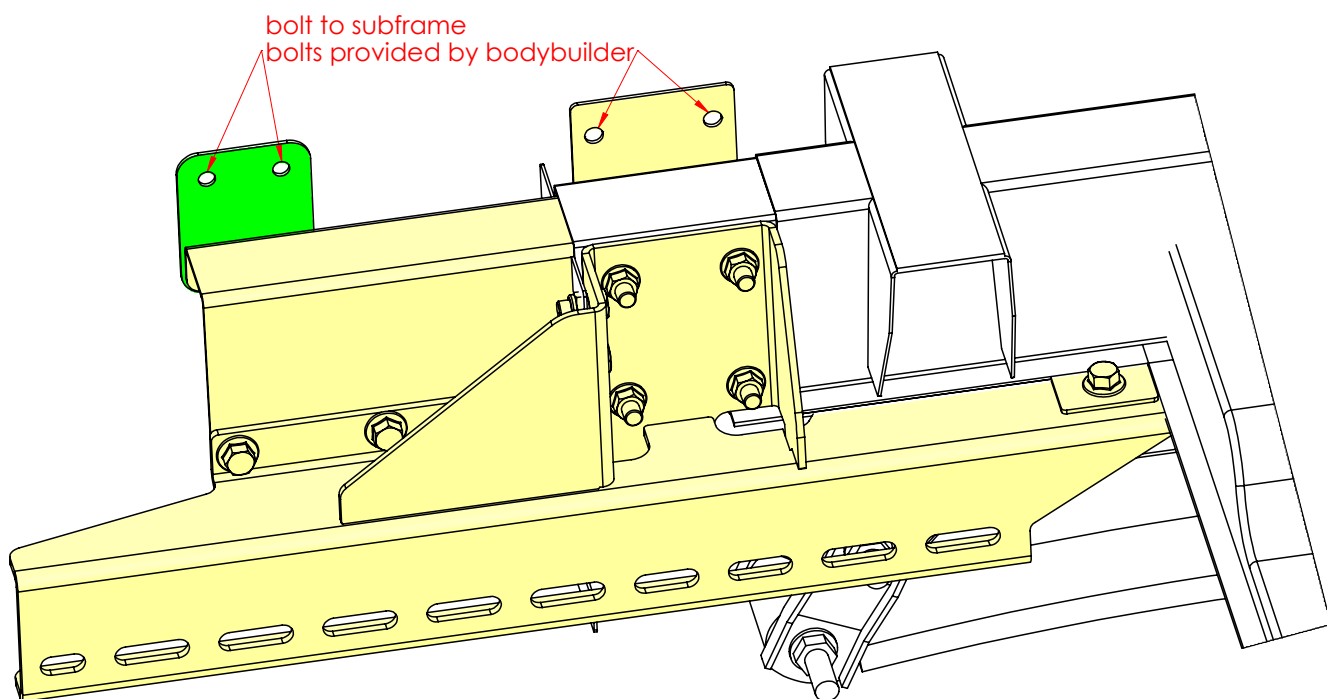

## STEP 8


Lift mounted on the INSIDE of the mounting plates

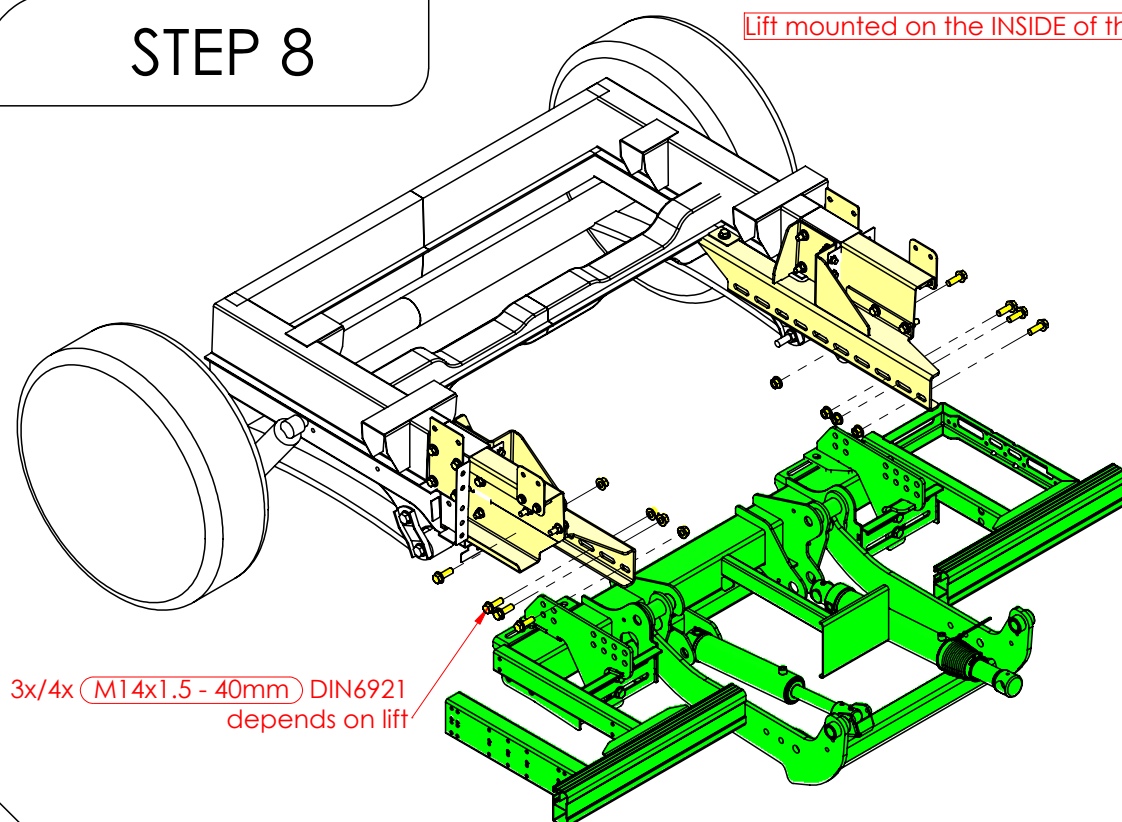

lift might vary from lift on drawing



## Overview

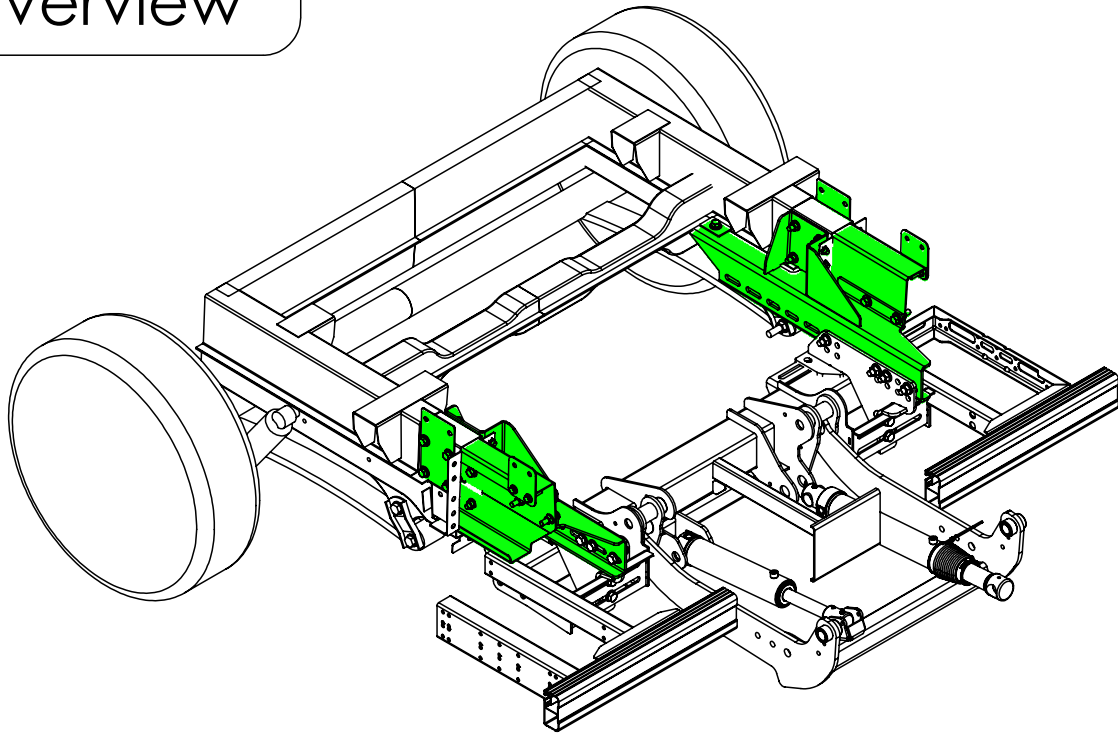

lift might vary from lift on drawing

