

MM.9.M28.B.S- Mounting instructions

Mercedes Sprinter 3-Series

RWD | Single Wheel | **WB**=3665mm | **OV**=1100mm

Volkswagen Crafter <2017


RWD | Single Wheel | **WB**=3665mm | **OV**=1100mm

Mercedes Sprinter 3-Series


RWD | Single Wheel | **WB**=4325mm | **OV**=1250mm

Volkswagen Crafter <2017


RWD | Single Wheel | **WB**=4325mm | **OV**=1250mm

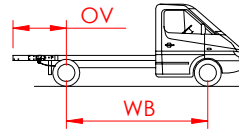


Ref	Bolts	QTY
1	M12x1.5 DIN6921 - 130mm	4
2	M12 DIN4762 - 100mm	4
3	M14x1.5 DIN6921 - 40mm	8

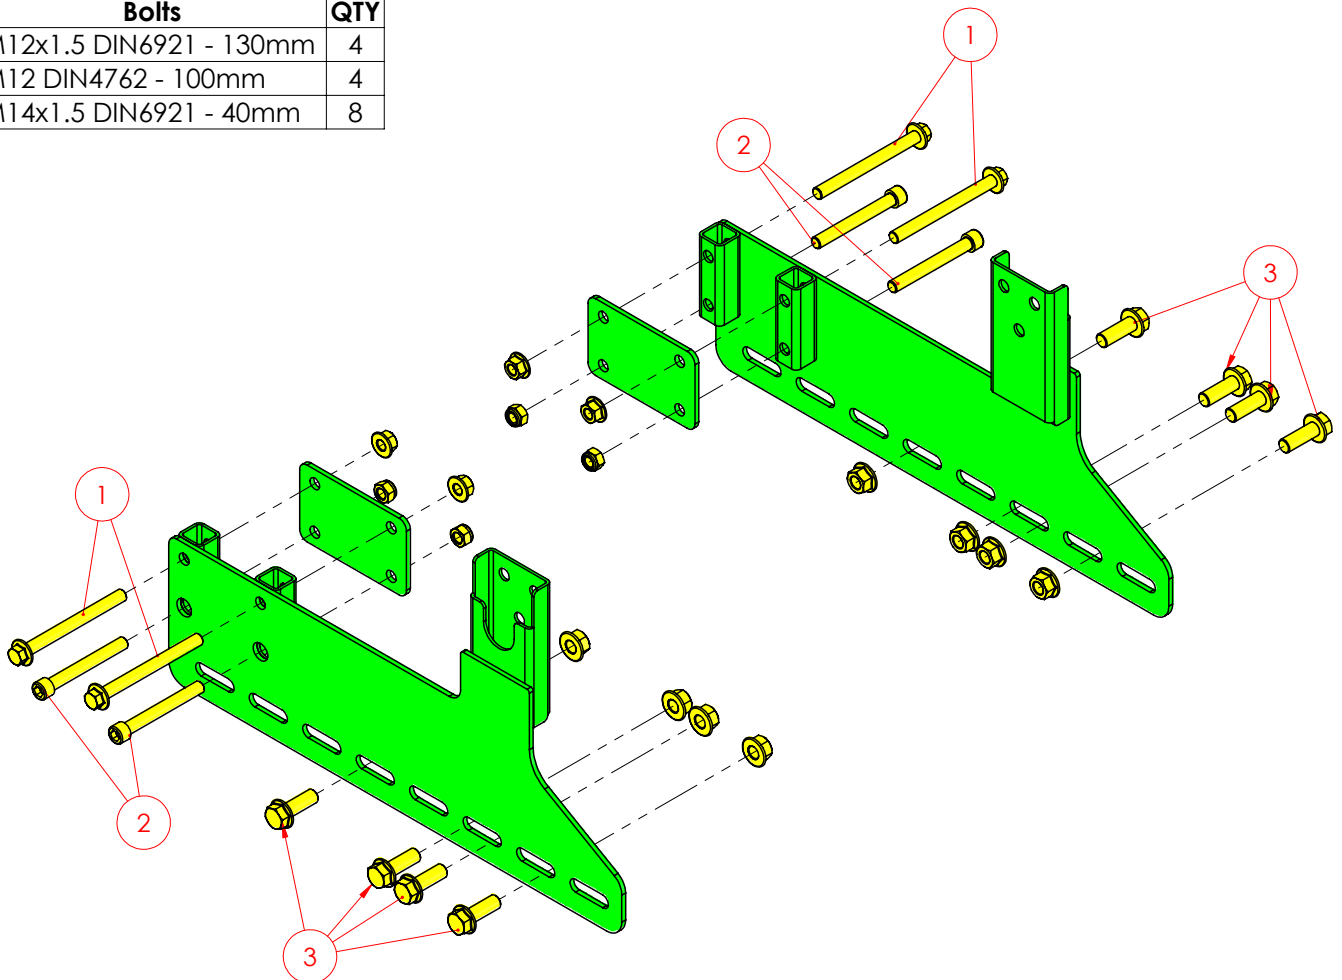


STEP 1

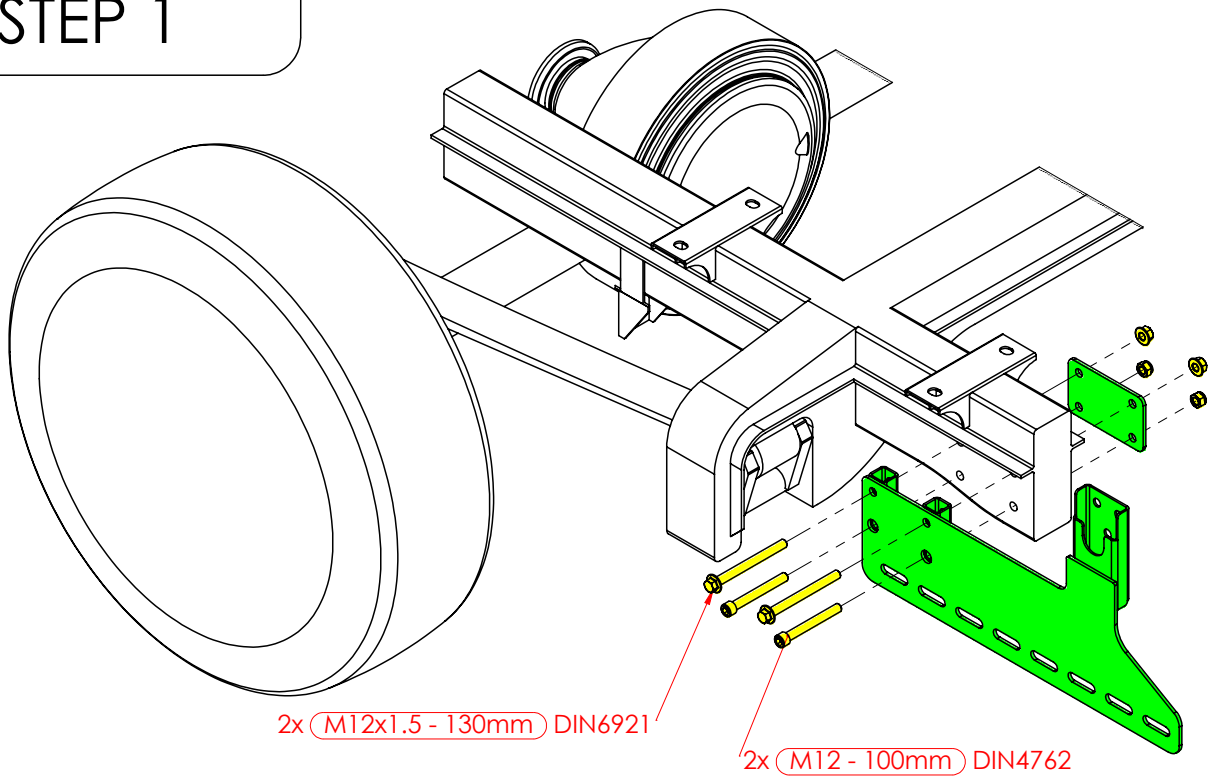

STEP 2

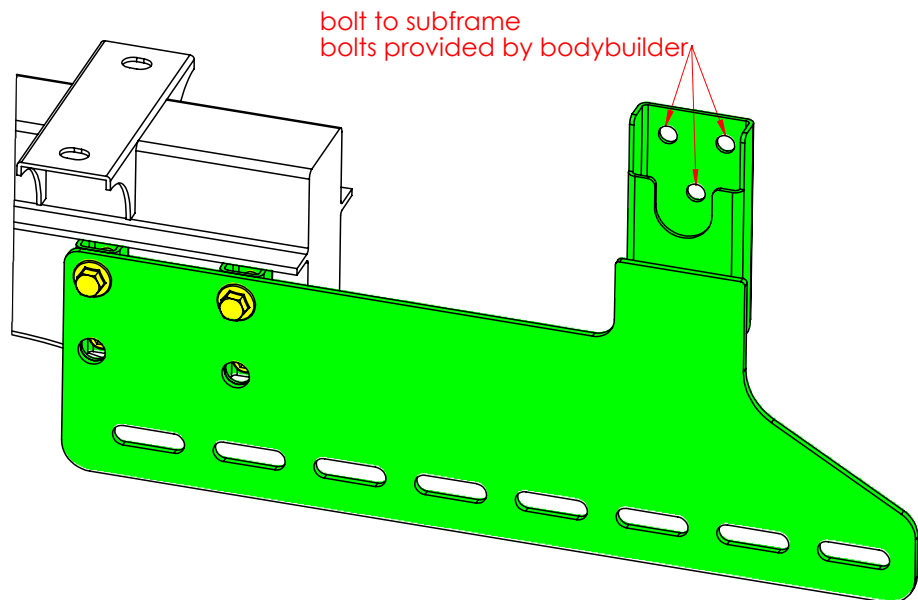


STEP 3

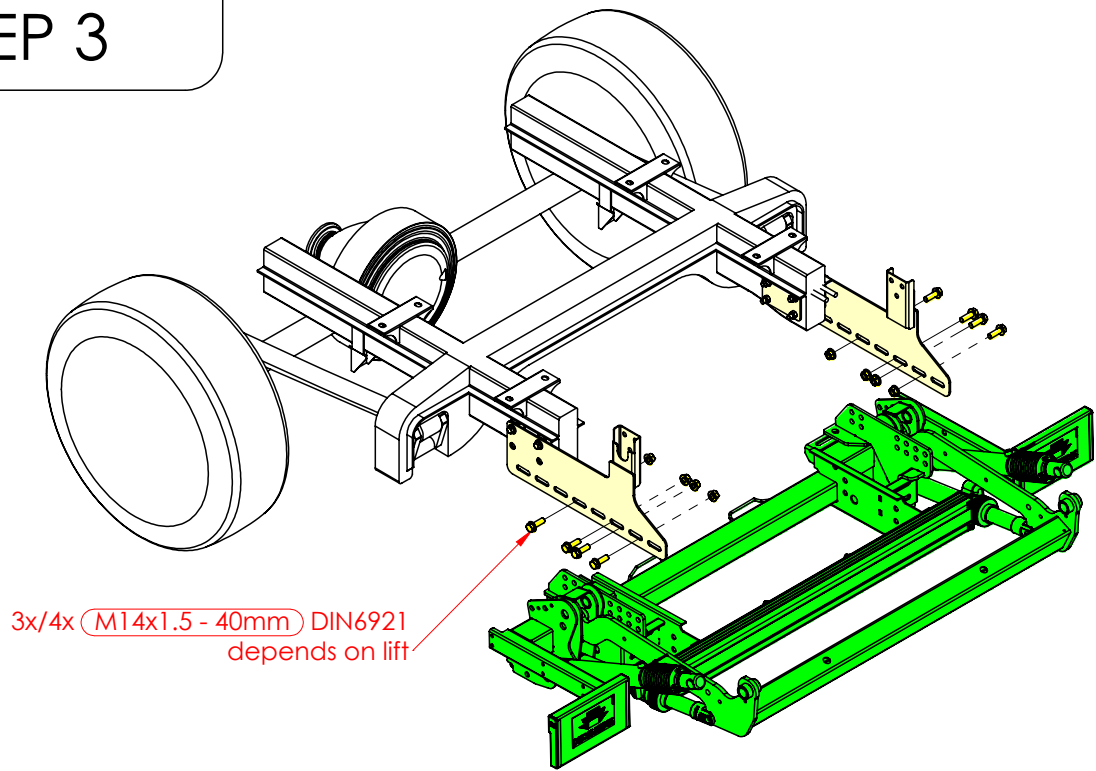

lift might vary from lift on drawing

Overview

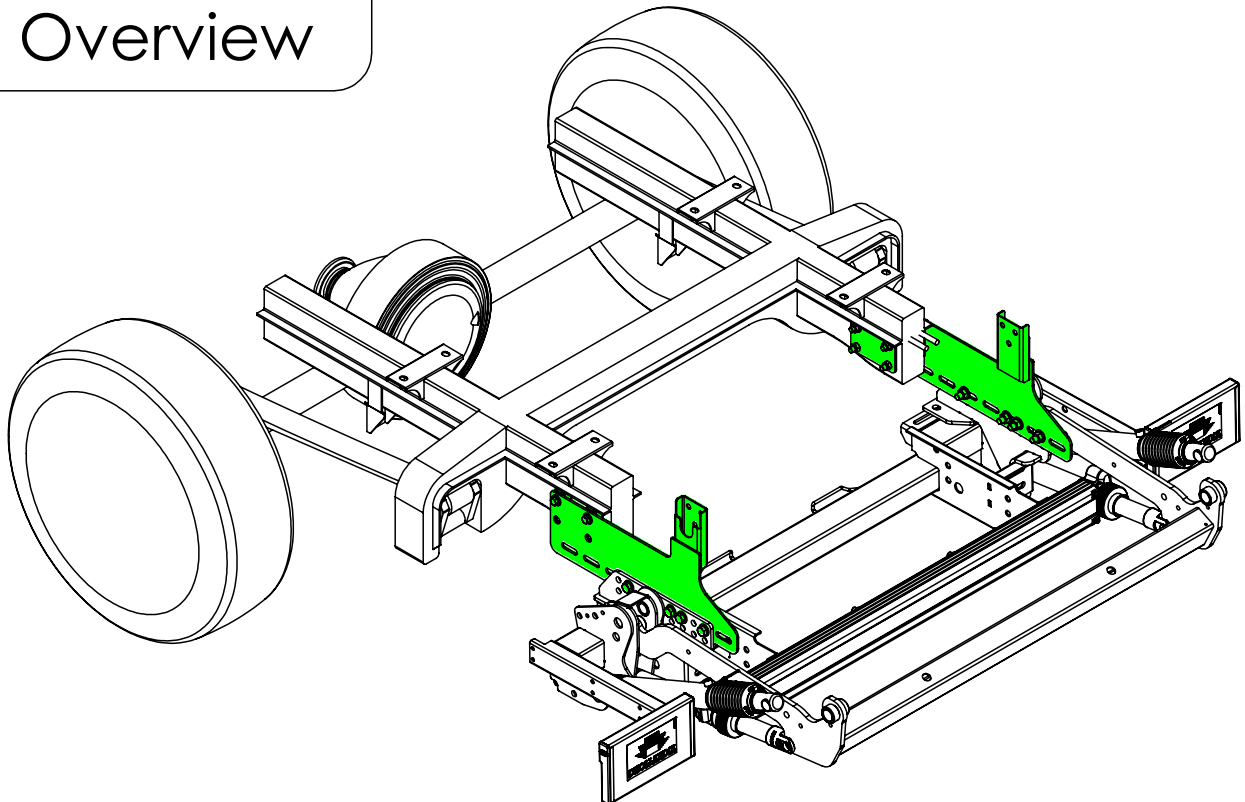

lift might vary from lift on drawing

