

MM.9.P08.860.S - Mounting instructions

Peugeot Boxer

RWD | Single Wheel | **WB=ALL** | **OV=1225mm**

Fiat Ducato


RWD | Single Wheel | **WB=ALL** | **OV=1225mm**

Citroën Jumper


RWD | Single Wheel | **WB=ALL** | **OV=1225mm**

Dodge Promaster


RWD | Single Wheel | **WB=ALL** | **OV=1225mm**

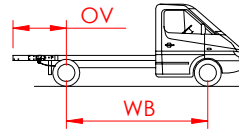


Ref	Bolts	QTY
1	M12x1.5 DIN6921 - 45mm	20
2	M12x1.5 DIN6921 - 130mm	4
3	M12x1.5 DIN6921 - 100mm	4
4	M14x1.5 DIN6921 - 40mm	8

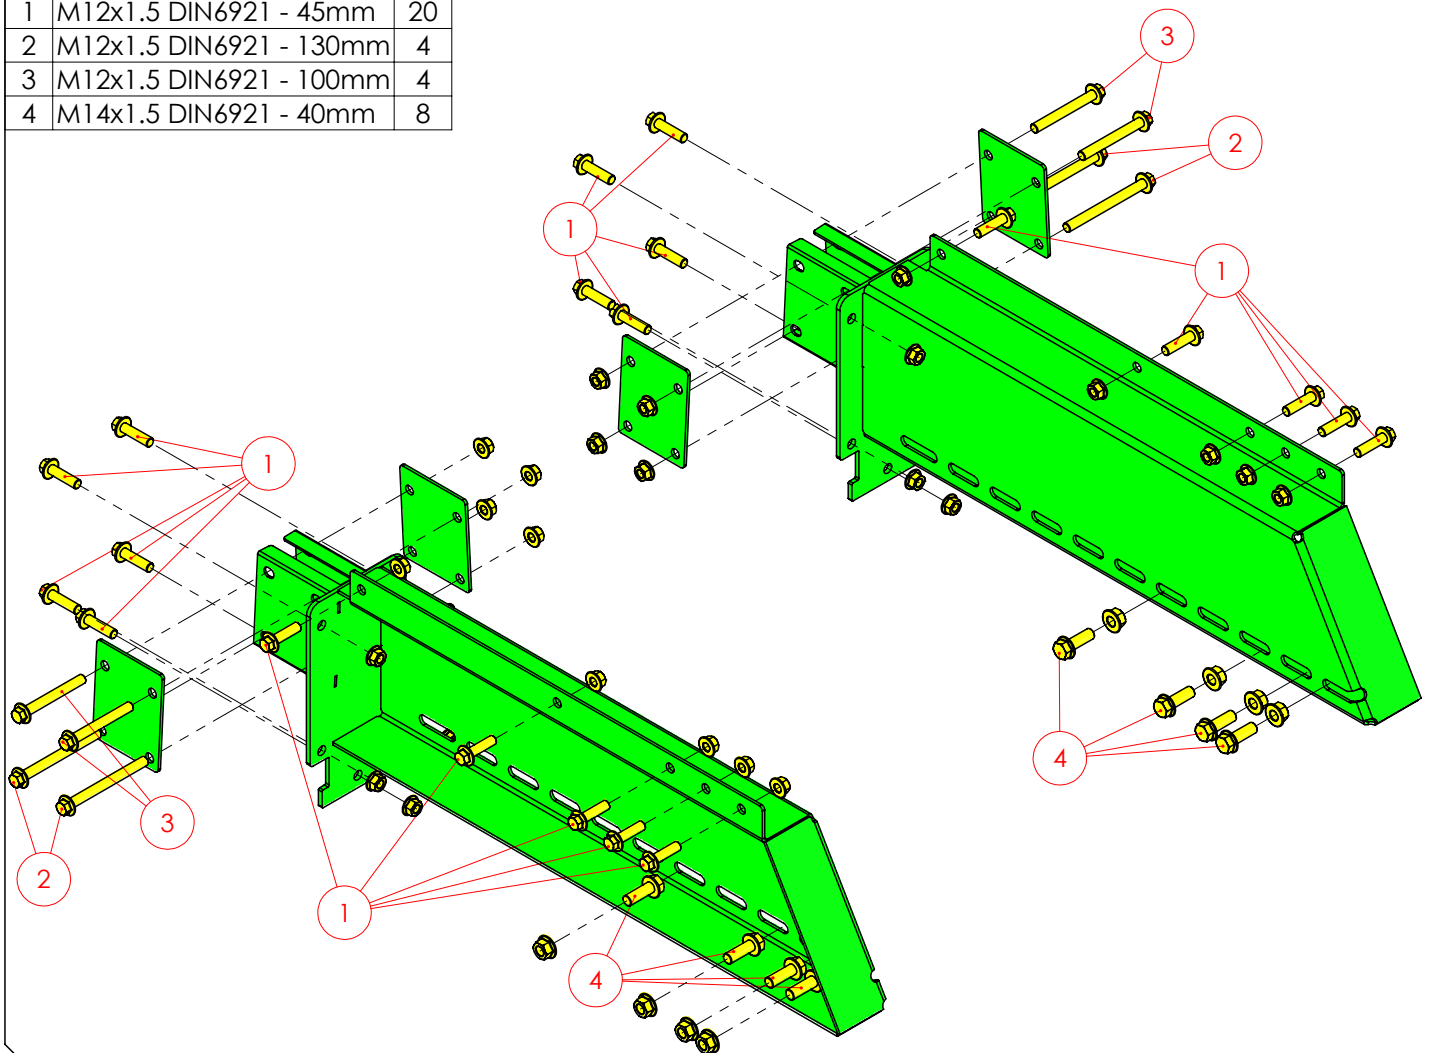


STEP 1

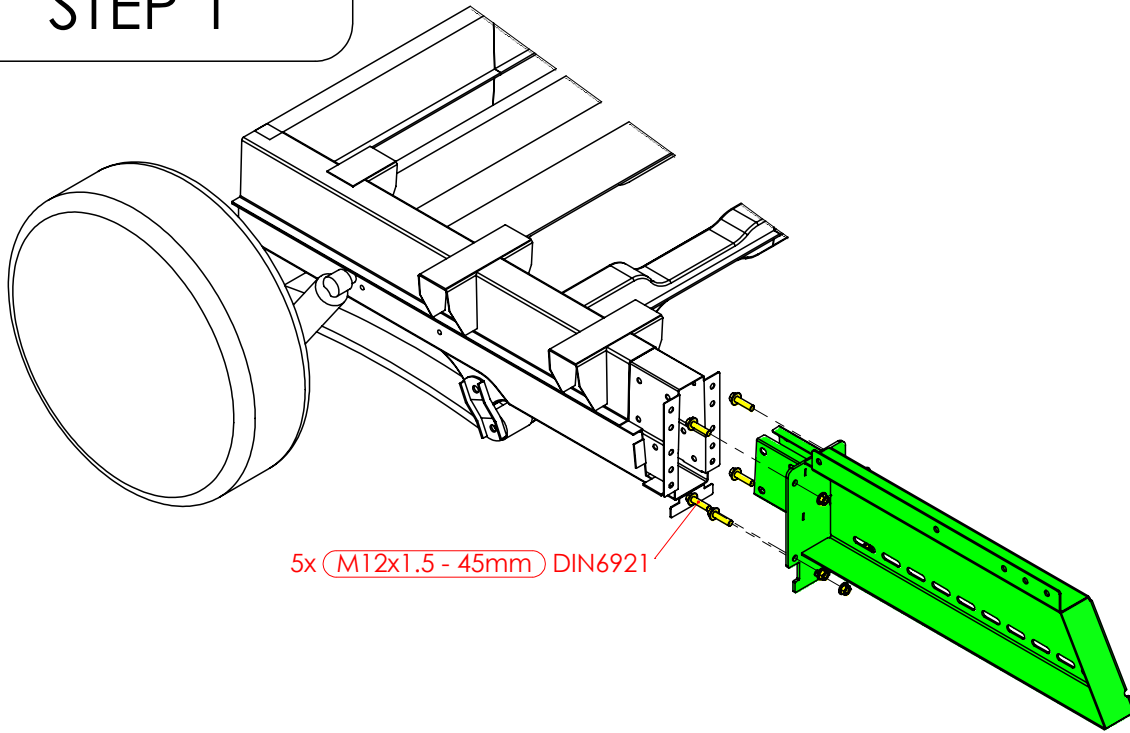


STEP 2

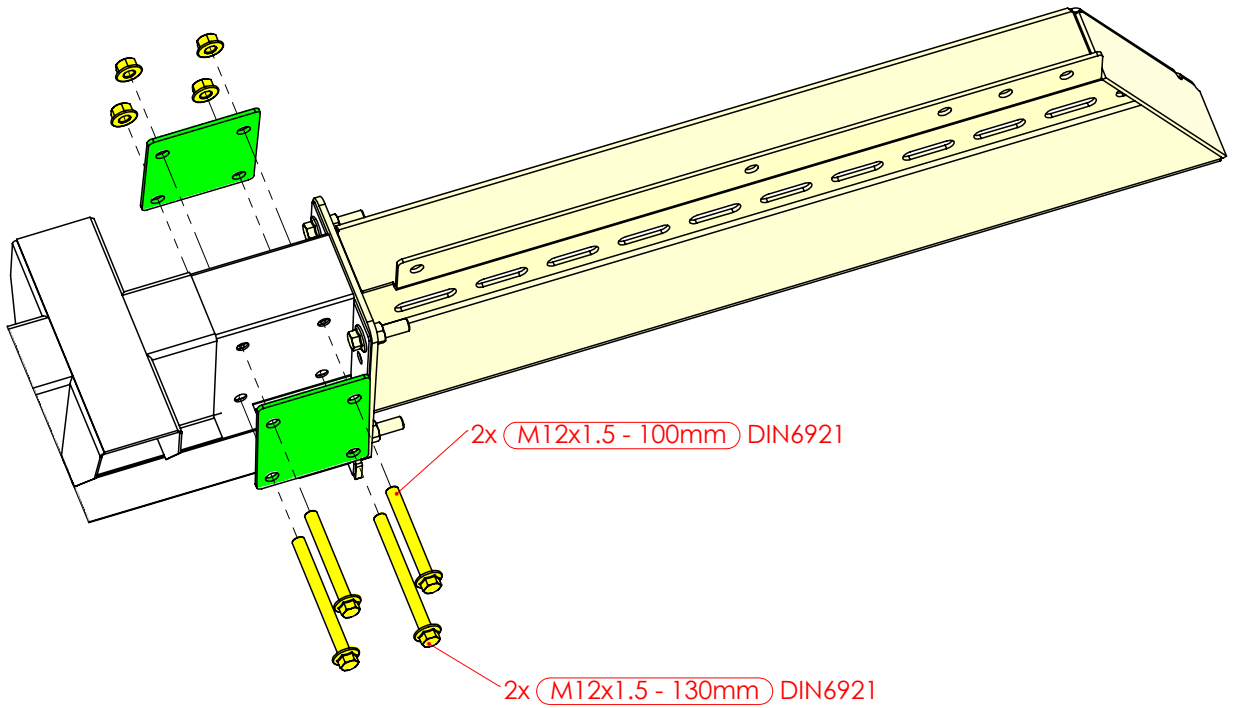

STEP 3

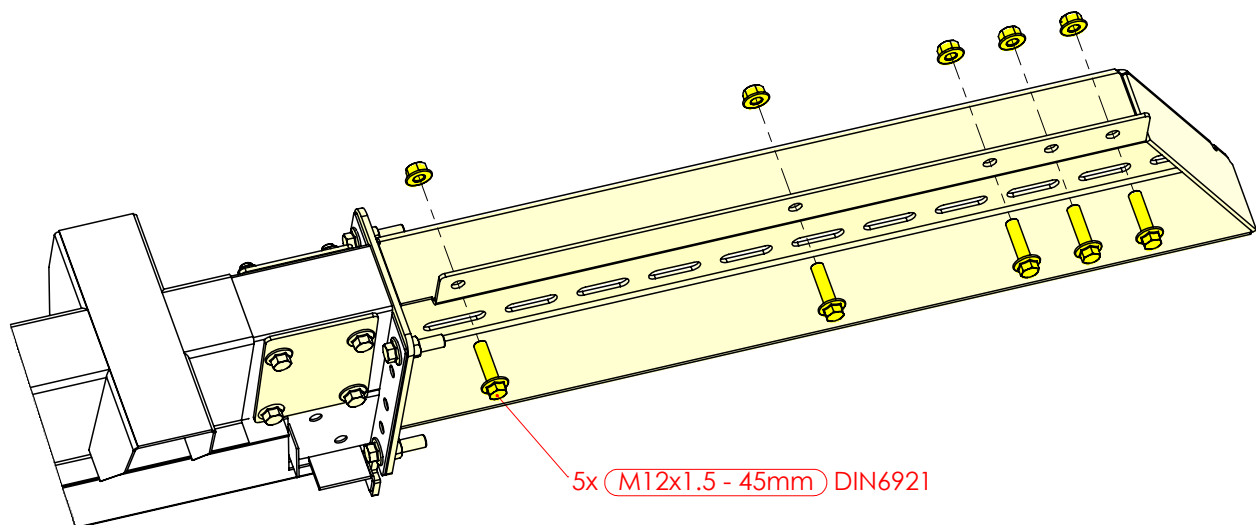

STEP 4

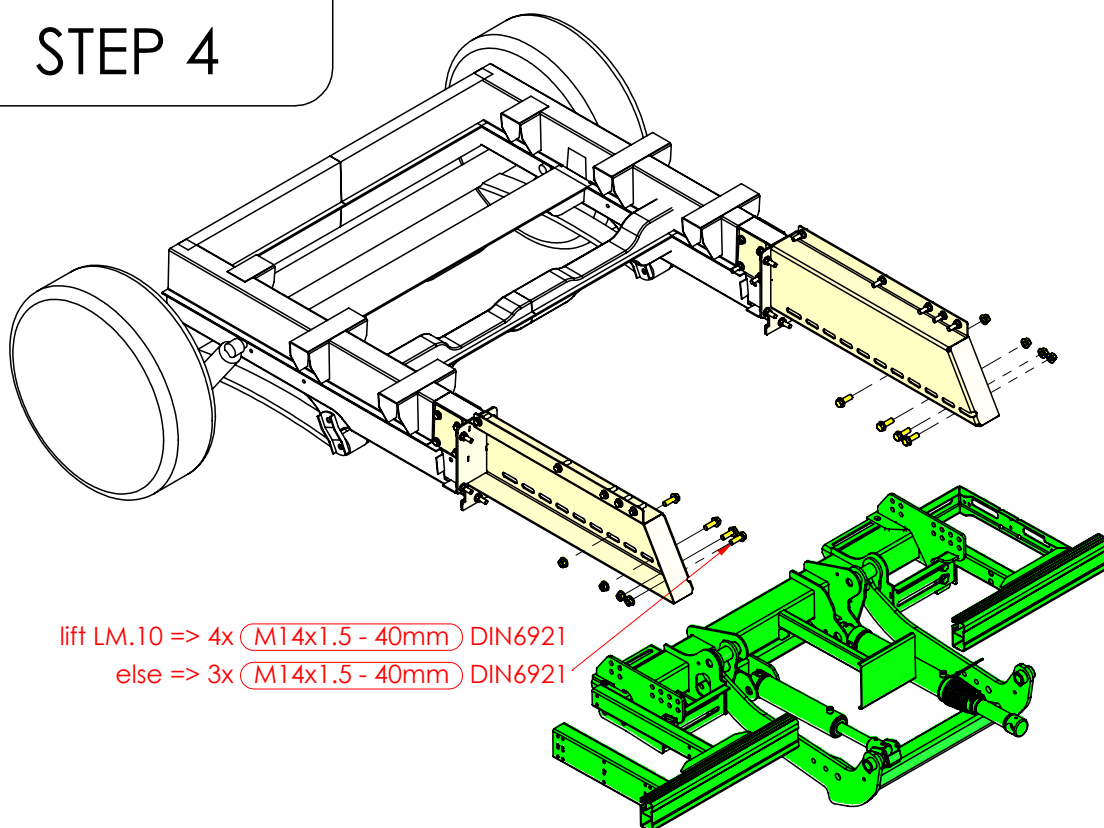

Overview

