

MM.9.R15.S- Mounting instructions

Renault Master


RWD | Single/Double Wheel | **WB=ALL** | **OV=ALL**

Opel Movano X62


RWD | Single/Double Wheel | **WB=ALL** | **OV=ALL**

Nissan NV400


RWD | Single/Double Wheel | **WB=ALL** | **OV=ALL**

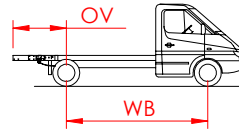


Ref	Bolts	QTY
1	M12x1.5 DIN6921 - 40mm	20
2	M14x1.5 DIN6921 - 40mm	8

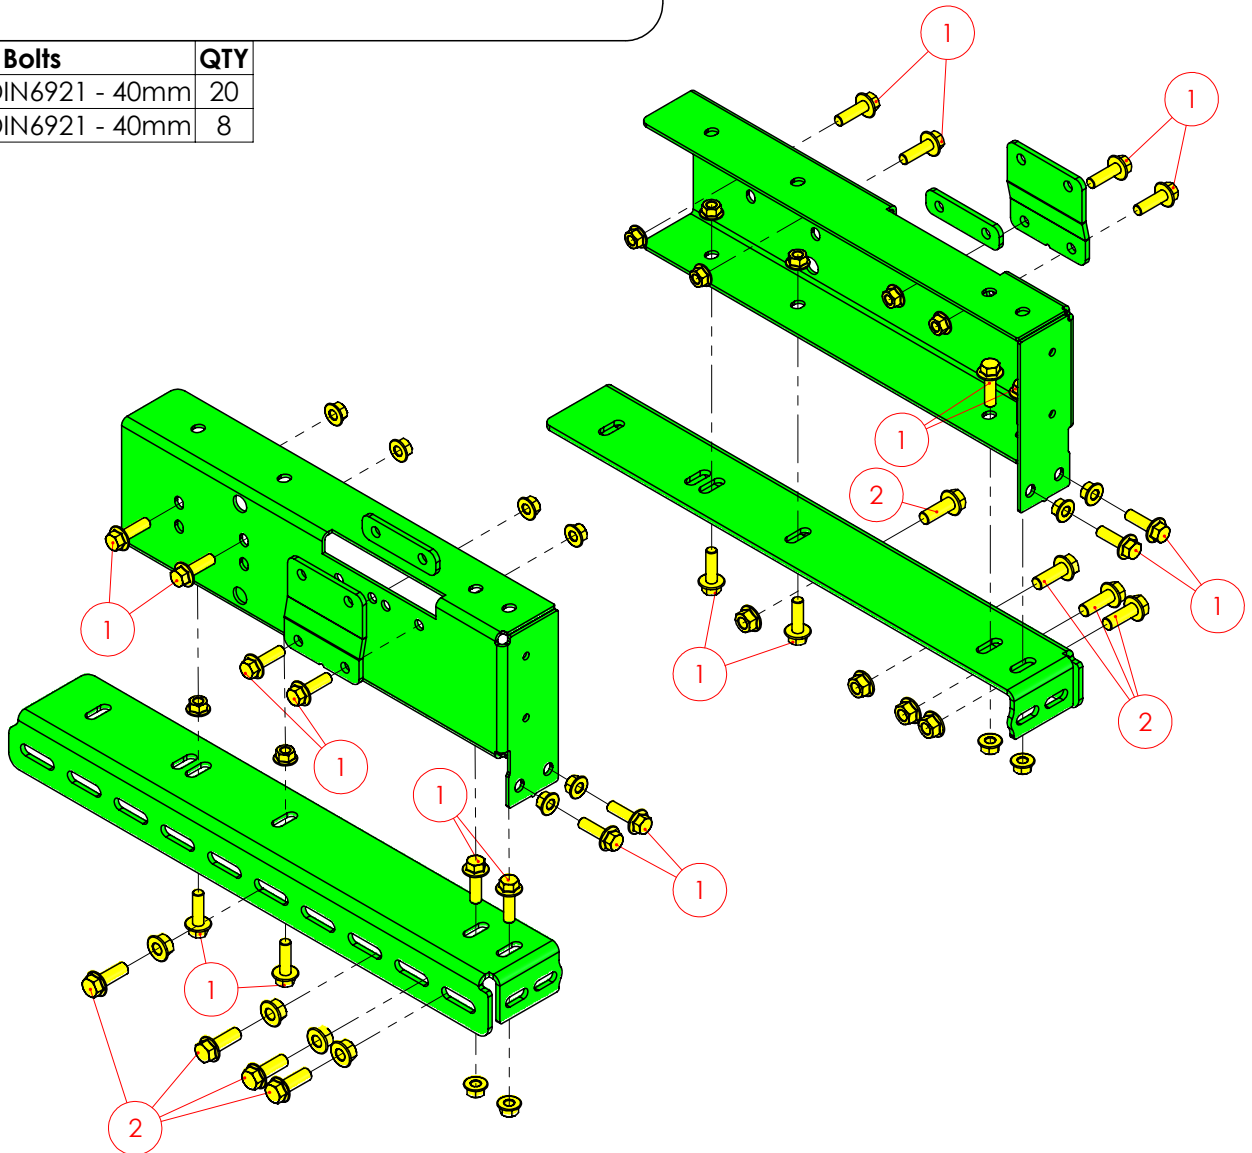


STEP 1

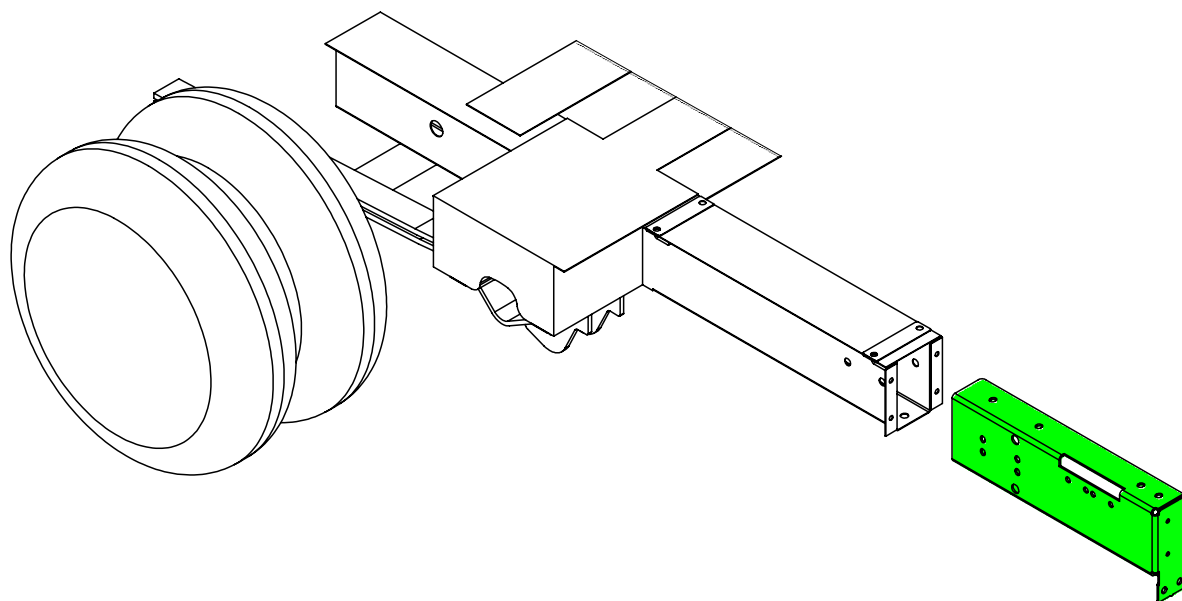


STEP 2

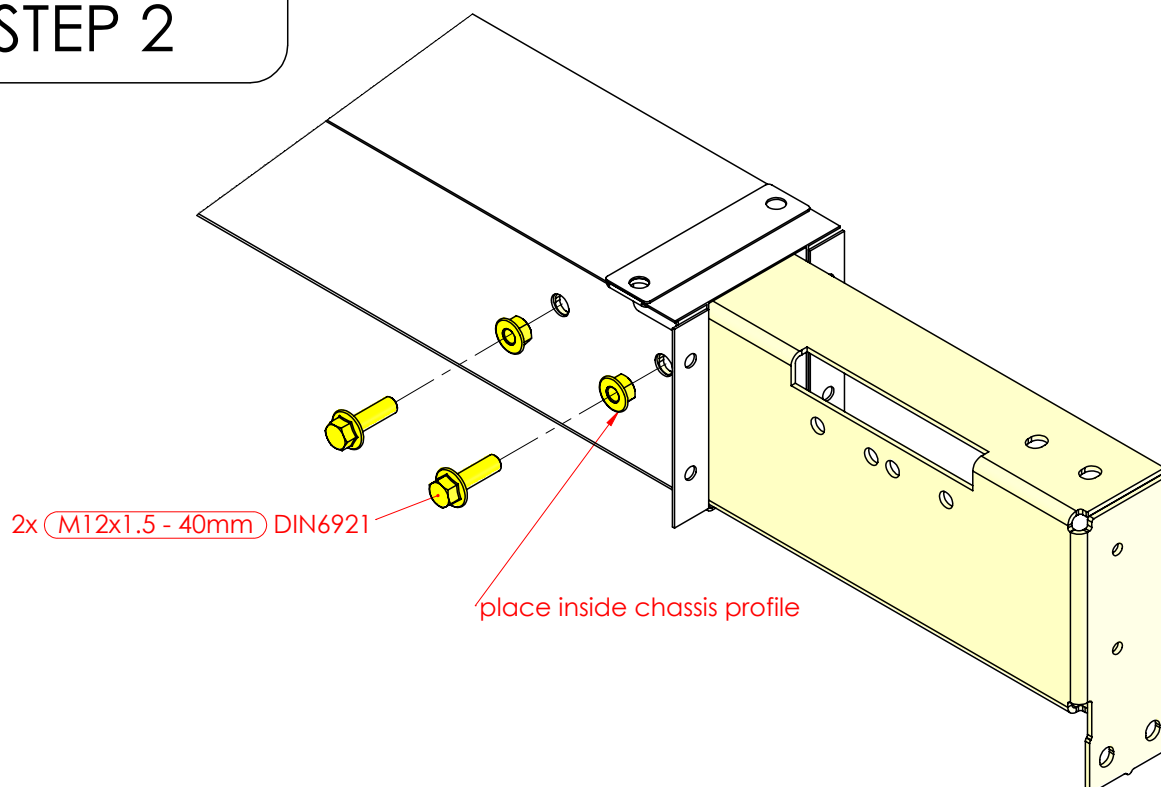


STEP 3

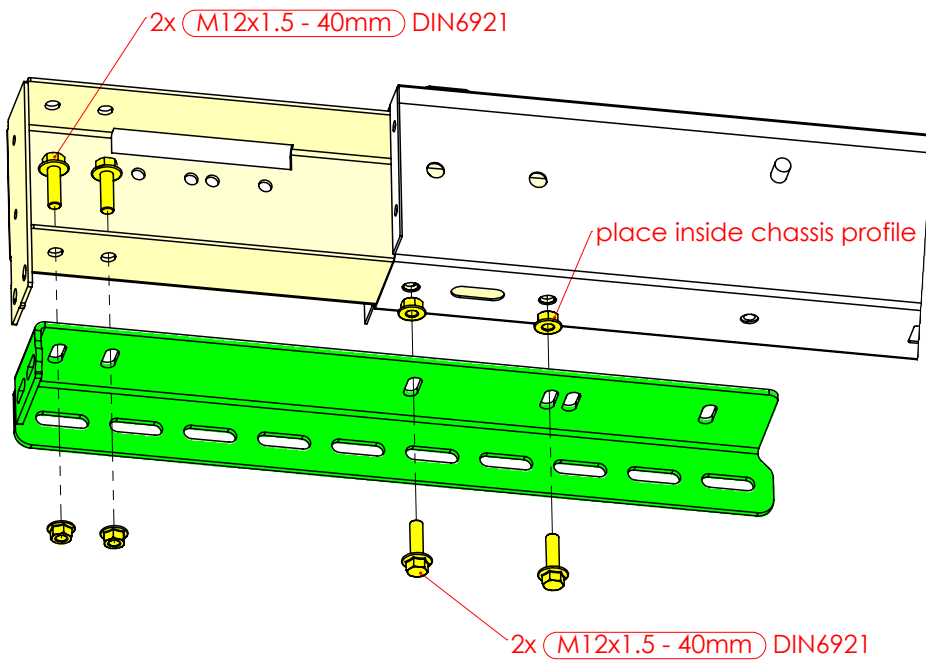


STEP 4

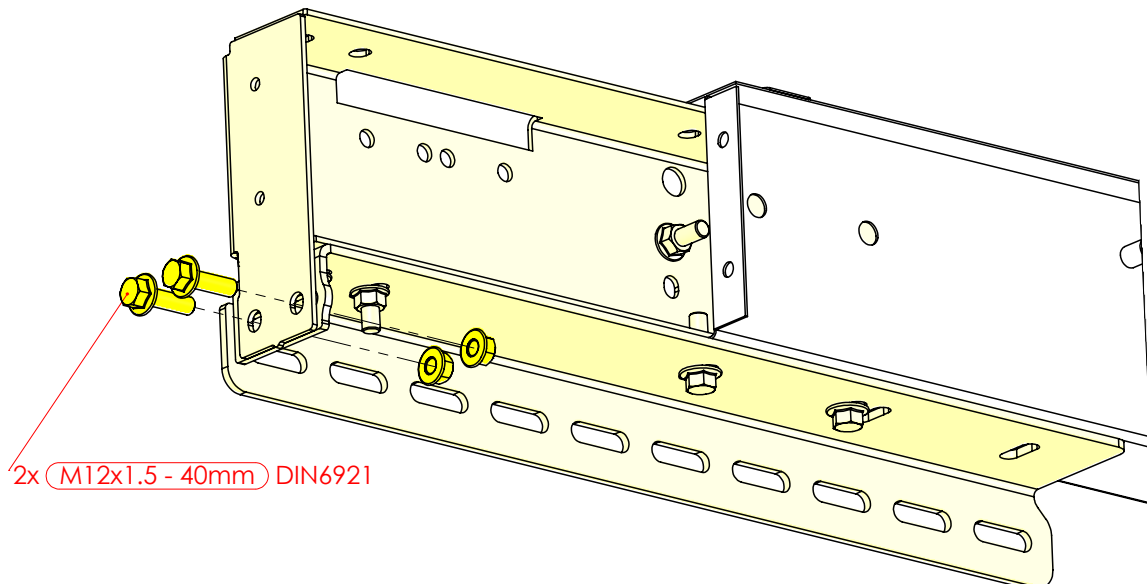


STEP 5

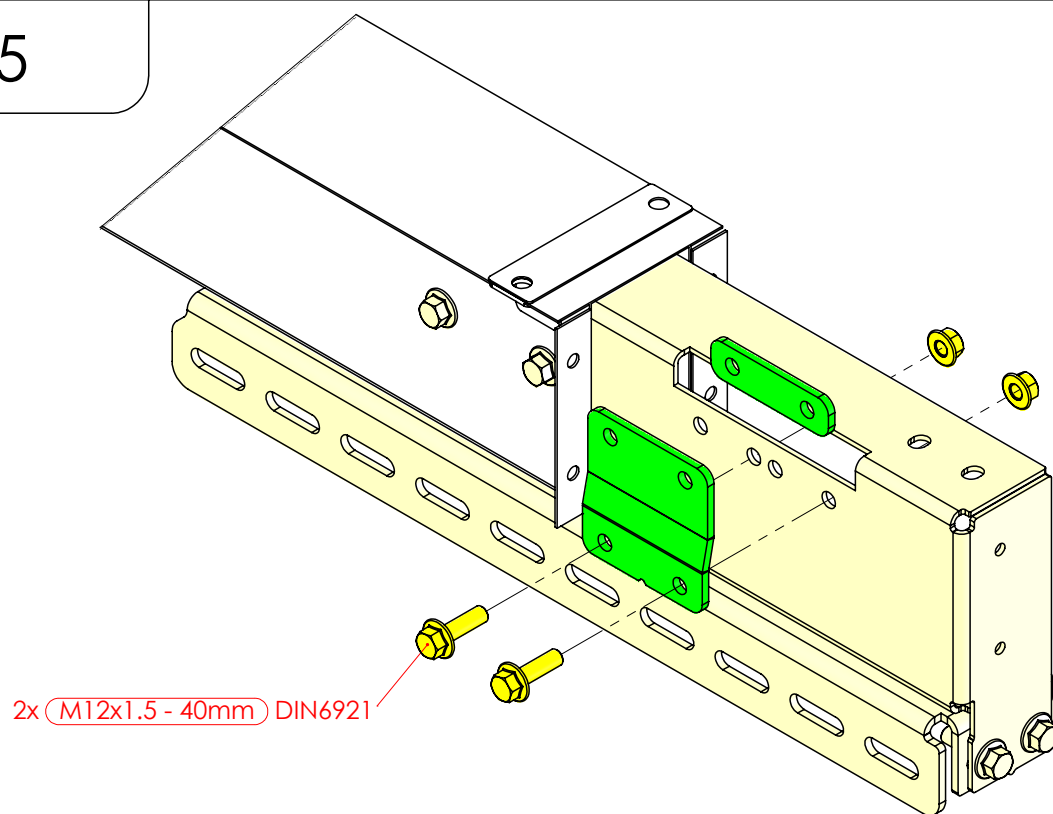

STEP 6

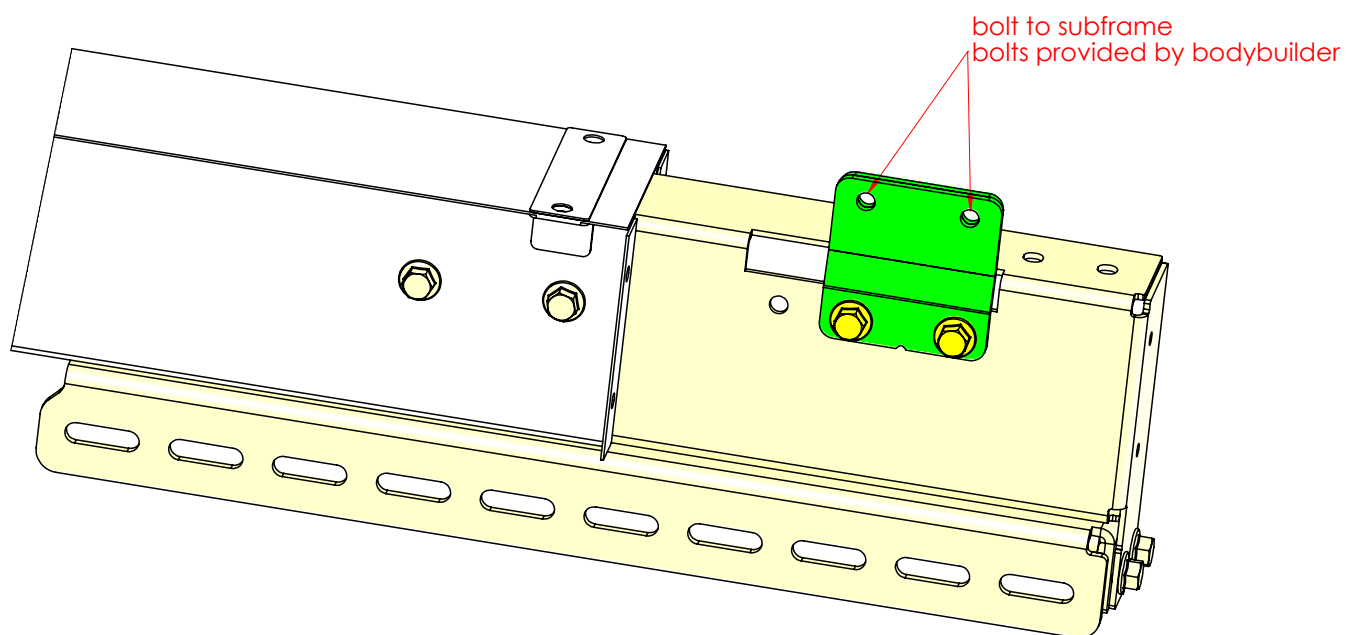

STEP 7

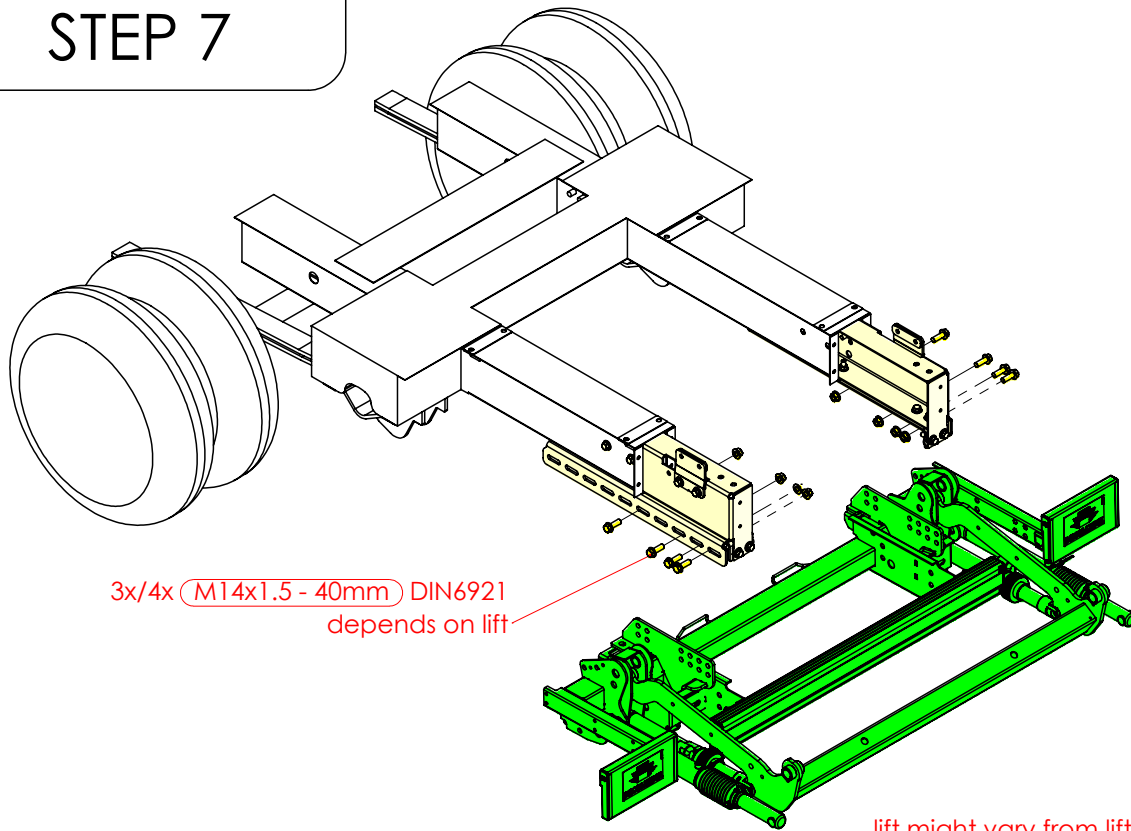

Overview

